

HAND DRYERS

M88-UL / M88A-UL / M89A-UL



04 / 04

INSTALLATION AND OPERATING MANUAL

USA

SANIFLOW CORPORATION
2655 LeJeune Rd.,
Suite 810. Coral Gables, FL 33134.
Tel.: 305 424 24 33
Fax: 305 424 24 35
info@saniflowcorp.com
www.saniflowcorp.com

SPAIN

MEDICLINICS, S.A.
Industria, 54
E-08025BARCELONA
Tel.: +34 93 446 47 00
Fax: +34 93 348 10 39
info@mediclinics.com
www.mediclinics.com

Cod.: 92915UL

WARRANTY · WARRANTY · WARRANTY · WARRANTY

LIMITED WARRANTY

This Product covered by this limited warranty is warranted to be free from defects in material and workmanship under normal conditions for a period of five years from the date of purchase.

The manufacturer's obligation under this Limited Warranty is applicable only where a product defect has been claimed during the warranty period. The manufacturer's obligation under this Limited Warranty is limited to either (I) replacement of the Product; or (II) replacement of defective parts. To claim under this Limited Warranty, contact one of Mediclincs, S.A. official dealers.

Mediclincs, S.A. shall not be responsible for any other damage, including, but not limited to, any defects or damage caused by or resulting from: (a) alterations to the product; (b) use of the product in an incorrect manner or for an unreasonable use; (c) failure to use the product in a safe and reasonable manner, and (d) repair of the product by unauthorized personnel.

LIMITATION ON LIABILITY

THE WARRANTY SET FORTH ABOVE IS EXCLUSIVE AND NO OTHER WARRANTY, WHETHER WRITTEN OR ORAL, IS EXPRESSED OR IMPLIED. MEDICLINC, S.A. SPECIFICALLY DISCLAIMS THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

 
IN NO EVENT SHALL MEDICLINC, S.A. BE LIABLE FOR INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, LOSS OF PROFITS, LOSS OF CUSTOMERS, LOSS OF USE, DAMAGE TO GOODWILL OR TO BUSINESS REPUTATION) OR FOR ANY OTHER LOSSES FROM ANY CAUSE, INCLUDING DAMAGES CAUSED BY THE PRODUCT, WHETHER OR NOT MEDICLINC, S.A. HAS RECEIVED NOTICE OF THE POSSIBILITY OR CERTAINTY OF SUCH DAMAGES OR LOSSES.

SOME STATES DO NOT ALLOW THE EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.


GARANTIA · WARRANTY · GARANTIE · GARANZIA

WIRING DIAGRAM


Automatic models

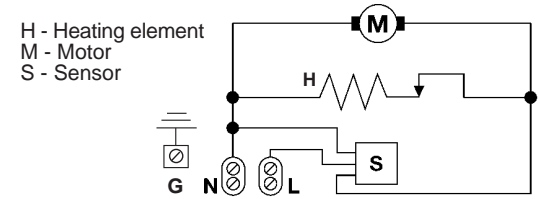


SENSOR RANGE

 


Connection to P.C. Board.

 


Models with pushbutton

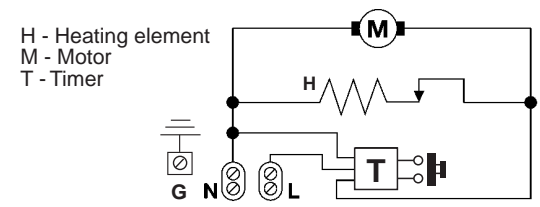 

Connection to P.C. Board.

 


BREAKDOWN LIST OF BASIC PARTS

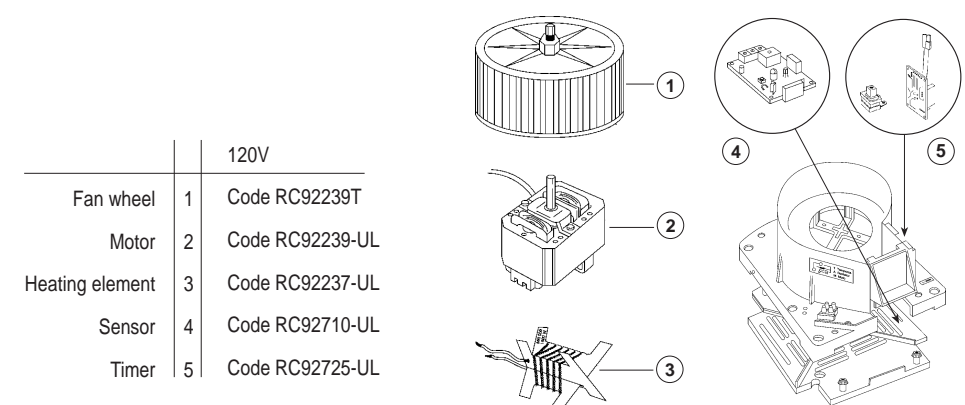 


		120V
Fan wheel	1	Code RC92239T
Motor	2	Code RC92239-UL
Heating element	3	Code RC92237-UL
Sensor	4	Code RC92710-UL
Timer	5	Code RC92725-UL

 METHOD OF USE

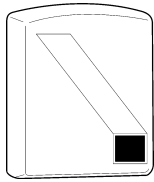

Pushbutton

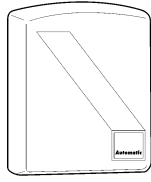 

Sensor

To dry hands correctly, we recommend rinsing well to remove all traces of soap. Once the dryer is working, hold the hands at an approximate distance of 2.5"÷3" (6÷7 cm) and rub together. The hands can be gradually taken away from the dryer and will continue drying up to a maximum distance of 4"÷6" (10÷15 cm).

Automatic models:

These models operate by hand detection. If hands are held 4"÷6" (10÷15 cm) from the air discharge nozzle, the dryer will start working and will stop 2÷3 seconds after use.

If the sensor is blocked due to vandalism, the dryer will completely stop working.

Please, concerning automatic models, let a minimum separation of , 16" (40 cm) between appliance and any shelf, marble, worktop or washbasins.

Machine must be handled only by an authorized technician.

WARNING: When dismantle the cover, electrical live and basic insulated parts are accesible.

PREVENTATIVE MAINTENANCE AND CLEANING

Correct cleaning of the machine will lenghten its working life considerably.

When in use, the machine will accumulate dust inside which should be cleaned out if used regularly, at least ONCE A YEAR.

CLEANING METHOD

1. Disconnect the dryer lead-in wire.
2. Unscrew the 4 side attachment screws using a Phillips screwdriver.
3. Remove cover (See dismantling for installation).
4. Remove the accumulated dust in the fan wheel with a soft bristle brush.
5. Using the same brush, remove the dust accumulated in the out grill.
6. Brush the sides between the support and the wall.
7. We recommend removing the machine from the wall and unscrewing the four mounting bolts to remove any obstructions (paper, cigarette ends, etc.)

Caution: do not damage or force any machine part.

8. When maintenance is complete, screw the base to the wall (if applicable), re-mount the cover, tighten up the screws and plug in.
9. In case of having dismantled the air outlet, install it again in its place and ensure that it is in its proper position
10. Switch on the machine and leave running until all traces of dust from the cleaning proces have been discharged from the air stream.

MODEL	M88-UL	M88A-UL	M89A-UL
Input voltage	110-120V 50/60 Hz		
Consumption	11A		
Rated power	1.7Hp (1300 W)		
Weight	6.616 lb (3 kg)		8.316 lb (3,75 Kg)
MOTOR:			
Power	1/7Hp (100 W)		
Type	Shaded pole Motor		
SCROLL-FAN	Single inlet centrifugal fan		
HEATING ELEMENT:			
Power	1.6Hp (1200 W)		
TIMER:			
Type	Timer	IR Sensor	
Drying cycle	45 s	-	
DIMENSIONS:			
Height	11.8" (300 mm)		
Width	9.8" (250mm)		
Depth	5.1" (130mm)		
COVER:			
Type	ABS		Aluminium
Certified in accordance with:	UL 499		
Air flow	140 CFM(4000 l/min)		
Air velocity	3,900 LFM(71 Km/h)		
Air temperature	124 ° F(51°C)		