



ADJUSTING SOUND & SPEED

The dryer is shipped set at maximum speed. Turn counterclockwise to reduce sound and speed. 3/4 of a turn max.

ADJUSTING SENSITIVITY

Place the screwdriver through the access hole as shown to adjust sensitivity. Range is set at the factory for 4 - 6 inches.

FIGURE 2 - ADJUSTING SPEED/SOUND AND SENSITIVITY

Distributed by
www.AmeraProducts.com
 Phone: (800) 608-6568
 Fax: (409) 840-5545
info@ameraproducts.com