



EZFILL™ FOAM REMOTE CONTROL

REMOTE CONTROL FOR ALL MODELS
0393-(n) and 0394-(n) Vanity Mounted
Automatic Foam Soap Dispensers

FUNCTIONAL & OPERATIONAL GUIDE

Distributed by
www.Ameraproducts.com
Phone: (800) 608-6568
Fax: (409) 840-5545
info@ameraproducts.com

If desired, use the remote control to adjust the foam soap dispenser settings. Hold the remote control straight in front of the sensor in a distance of about 4-6" (10-15cm).

Attention: Holding the soap dispenser remote control out of the recommended range (too close or too far) may interfere with its activation.

1-SOAP VOLUME

Press the + sign at the SOAP button to increase the soap volume by increasing the dispensing time and the - sign to decrease it. Adjustable foam dispensing duration (min-max): 0.5-2.5 seconds
Indication: continuous blinking blue light in the sensor eye.

2-SOAP CONSISTENCY

To improve the soap "foamability" change the amount of air to be mixed. Press the + sign on the AIR button to increase the air mixed with the soap and the - sign to decrease it.
Indication: 2 blinks of the blue light in the sensor eye.

3-RES


This function resets the sensor back to factory settings: soap volume, soap consistency (foamability), soap tank refill, temporary off and reset.

4-TEMPORARY OFF FUNCTION

This function temporarily disables the dispenser and is ideal to perform any kind of activity in front of the sensor without operating the system (for example, cleaning). The soap dispenser will remain shut off for one minute when this button is pressed once. To cancel this function and to return to normal operation press the On/Off button again or wait one minute.

5-FILL THE SOAP TANK

Once the soap tank has been filled/refilled, press the FILL button. The pump will work for one minute in order to fill the piping with soap. To stop this activity press the FILL button again. If the soap has not started coming out of the spout, after 1 minute of priming press the FILL button again.
Indication: continuous blue light in the sensor eye.

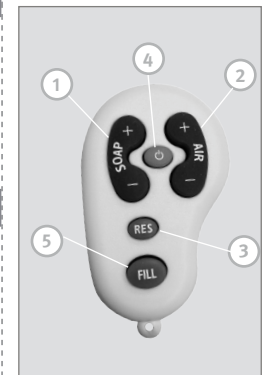

Remote control battery

The remote control is powered by a CR2032 battery, with a life span of 4 years.

Replacing the battery:

1. Remove the metal key ring using small pliers
2. Separate the two parts of the plastic cover. note the two plastic pins which connect the two cover parts
3. Gently push the old battery out of its support and replace it with a new one
4. Reassemble the remote