

High Chair

Maintenance Checklist



Designer
KB105-02

Keep your Koala Kare products in good working order for the families who visit your establishment. By performing regular maintenance and purchasing replacement parts when needed, your products will safely meet your establishment's needs for many years to come. Use the checklists below to examine your high chairs and make sure they are safe and secure.

Maintenance Checklist

1. Check that the unit has a functioning, non-frayed waist strap. If the waist strap is damaged, please replace.
2. Check that the crotch strap is non-frayed and is firmly attached to both the safety bar and seat bottom. If damaged, please replace.
3. Ensure that the buckle clicks when closed and is firmly attached at all ends.
4. Check that the unit has an intact warning label affixed to the seat back. If damaged or unreadable, please replace.
5. Make sure that any applicable plastic and wood parts are firmly attached with provided hardware. Regularly tighten as necessary.

Cleaning Checklist

1. First, use a soft rag to wipe down all surfaces. Allow to air dry.
2. Next, apply non-abrasive disinfectant to clean, dry surfaces.
 - Do not use bleach on Koala Kare high chairs. This may cause discoloration and will void the warranty on your products.



KoalaKare Stowe™ KB615-02



Diner High Chair KB950-01



KidSitter KB977-04



ECO KB833-09