

Koala Stowe™ High Chair Usage Instructions

P/N KB615

Please Note: This product is designed to be used by an infant or child capable of sitting upright and unassisted. Waist restraint should be buckled at all times when in use.



WARNING:

- Always keep child in view while in the high chair. Stay near and watch child during use.
- Always use restraints, and adjust to fit snugly. The child should be secured in the high chair at all times by the restraining system.
- It is recommended that the high chair be used only by children capable of sitting upright unassisted.
- Do not use the high chair unless all components are correctly fitted and adjusted.
- FALL HAZARD: Children have suffered severe head injuries including skull fractures when falling from high chairs. Falls can happen suddenly if a child is not restrained properly.

You are responsible for the safe operation of this unit.

Inspection Criteria

A properly maintained unit:

Has three ends of a functioning, non-frayed strap. Buckle clicks when closed and is attached at all ends on seat bottom.

Has an intact warning label affixed to the seat back. (If damaged or unreadable, please replace.)

All plastic parts firmly attached by provided hardware, and should be tightened as necessary.

To open the high chair, depress the two buttons on the chair legs. Product is fully open when the seat surface is horizontal and locked in place.



Restraint Usage

To fasten the waist strap, push spring tabs into the buckle receptacle until both lock in place with an audible "click".



The waist restraint can be adjusted to make the strap tighter or looser.

Maintenance

Clean and sanitize regularly. Wipe down high chair with a soft rag using a non-abrasive cleaner.

Important: DO NOT USE BLEACH on this product. May cause discoloration. Use of bleach on this product will void warranty. Do not use abrasive cleaners as they can scratch the product.

Koala Kare Products A Division of Bobrick 6982 South Quentin St., Centennial, CO 80112-3945