

INSTALLATION INSTRUCTIONS FOR DR & DRC SERIES DRYER RECESS KIT


Your recessed kit consists of the following:

- | | | | |
|----|-----------------------------------|----|---------------------------|
| A) | Stainless steel recess frame | D) | 4 pcs 1/4"-20 X 3/4" bolt |
| B) | Steel recess box | E) | 4 pcs 1/4" flat washer |
| C) | 4 pcs 1/4"-20 cage nut (attached) | F) | 4 pcs #8 X 1" wood screw |

* Recess box mounting screws are **NOT** provided (#10 wood screws required)

- 1) Suggested mounting heights from **FLOOR** level to **BOTTOM EDGE** of the **RECESSED BOX**.

	MEN'S	WOMEN'S	CHILDREN (Depends on age)	HANDICAPPED
Recessed DR-N HAND dryer	40" (102cm)	38" (97cm)	28" to 38" (71 to 97cm)	34" (81cm)
Recessed DR-N HAIR dryer	70" (178cm)	66" (168cm)	44" to 66" (112 to 168cm)	52" (127cm)

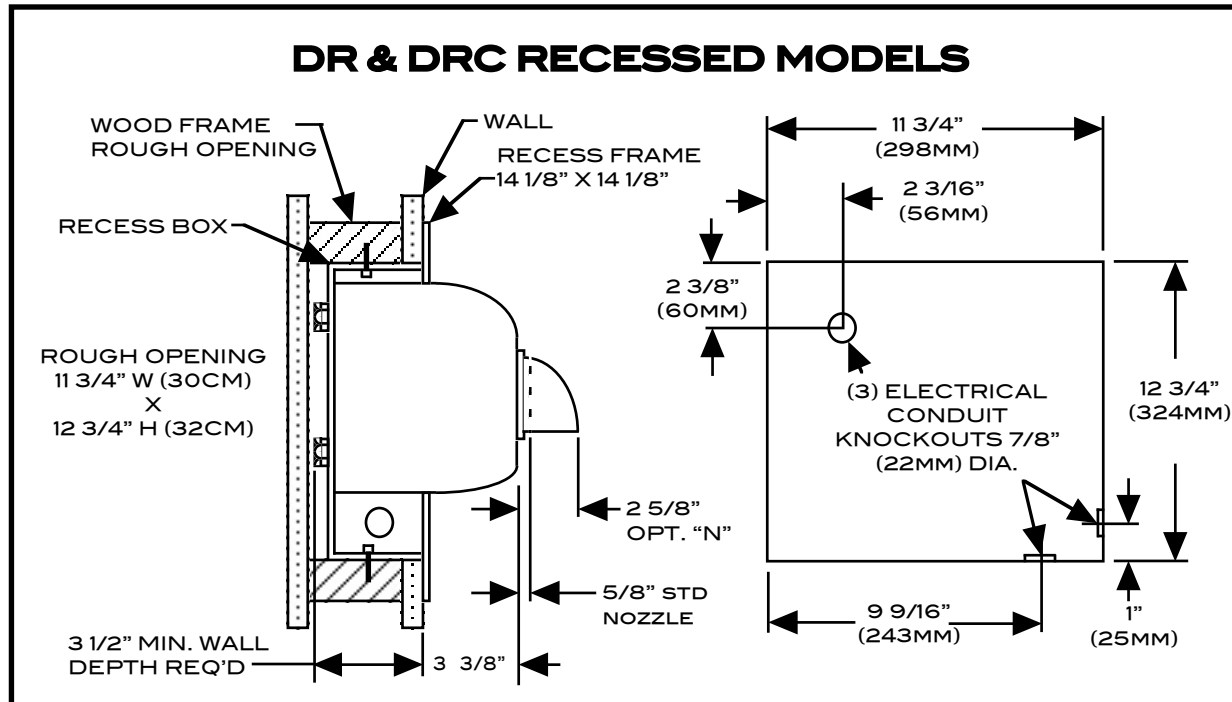

- 2) Suggested wall opening 11 3/4" wide X 12 3/4" high X 3 1/2" minimum depth. Wall opening should be framed on four sides with openings to allow easy access to electrical conduit.
- 3) Install recess box into frame using eight #10 wood screws (not supplied.) The front metal edge of the recess box must be **FLUSH** with finished wall.
- 4) Remove cover from dryer assembly by unscrewing one tamper resistant bolt. (See owner manual for instructions.)
- 5) Place dryer assembly into recess box and attach with four 1/4"-20 X 3/4" bolts and washers.
- 6) Unit **MUST** be installed by a qualified licensed electrician. Connect electrical service wires to terminal block. The ground wire **MUST** be connected to the ground screw. Use 12-3 or 10-3 wire, as required by local electrical code. Connect to a dedicated line **NOT** to exceed 20 Amps. (See owner's manual for instructions.)
- 7) Carefully replace the cover using the tamper resistant bolt. Hold recess frame in place on the wall. Attach using four #8 X 1" phillips head wood screws (supplied.)

WARNING DISCONNECT POWER BEFORE INSTALLING
DESUNA LA ELECTRICIDAD ANTES DE HACER REPARACIONES