


Distributed by
www.AmeraProducts.com
Phone: (800) 608-6568
Fax: (409) 840-5545
info@ameraproducts.com



Horizontal Wall-Mounted Baby Changing Station KB101 and KB111-SSWM INSTALLATION INSTRUCTIONS

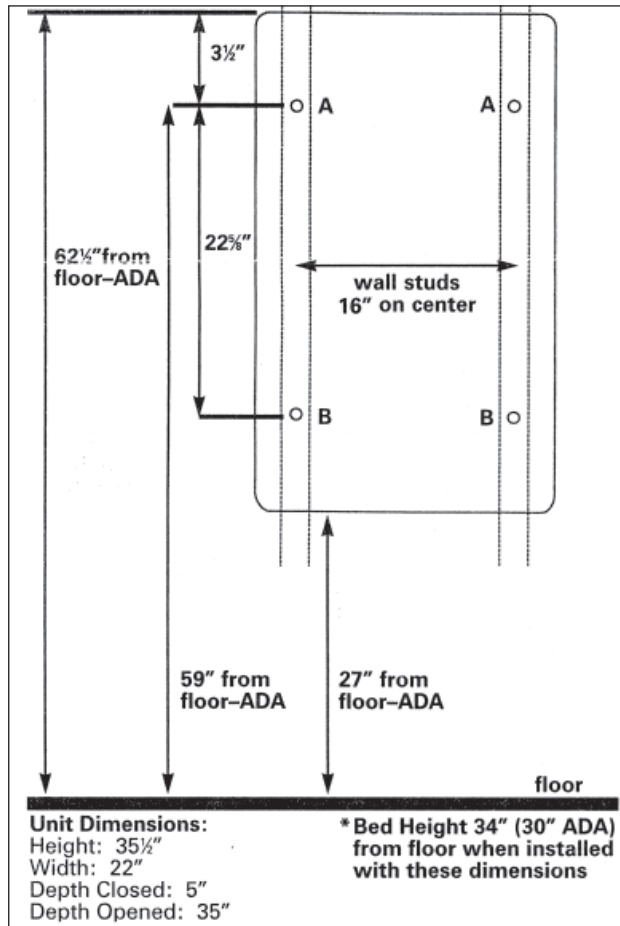

Step 1.

Remove changing station from the shipping container and check for any freight damage. Identify the best location for installing the unit. Hold the unit in place and open the bed. Make sure you have taken the operating clearance into consideration.

Step 2.

Determine the best method of mounting based on the type of wall. You may have left over hardware when you have finished installation.

Step 3.

The vertical unit has four mounting holes provided in the back wall, positioned on a 16" (40.6 cm) stud center.

If possible, locate the wood or metal wall studs for fastening the unit in the desired location. If the walls do not have studs on center as outlined, make sure at least one side of the unit is installed into the stud. Use toggles (supplied) for holes on the opposite side.


Step 4.

Find the stud where you will be attaching the left side of the unit to the wall. Measure up from the floor, at the center of the stud, and mark the wall. Line up Hole A with the mark on the wall. Mark remaining holes using a measuring tape to make sure the holes are precisely positioned. Hold unit in place to verify. Use four 1/4" x 3" (.64 cm x 7.62 cm) panhead wood screws with washers (supplied) when wall studs are available.


If the wall surface is masonry or tile over studs, use a 7/32" (.55 cm) masonry drill bit for the pilot hole until you hit the stud. Change bit to 1/8" (.32 cm) regular drill bit. Use four 1/4" x 3" (.64 cm x 7.62 cm) panhead wood screws with washers (supplied).

If the wall has wood studs that are not on 16" (40.6 cm) centers, has metal studs or an underlying surface of concrete block, drill with a 1/2" (1.27 cm) masonry bit. You must allow a minimum of 2 1/2" (6.35 cm) of inside wall space for toggles to turn. Insert and tighten toggles (supplied). Position unit over toggles and insert 1/4" x 3" (.64 cm x 7.62 cm) Phillips panhead machine screws with washers (supplied).


Using Toggles

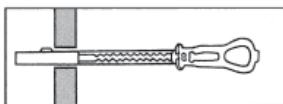


A. Insert Toggle in hole.

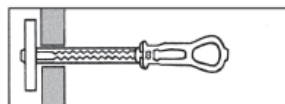

B. Pull ring and push cap tightly against wall.

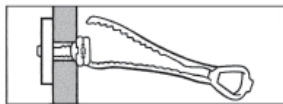

C. Snap off straps.

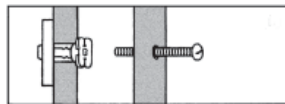

D. Install unit using screws and washers.

Using Restraint System

To fasten the waist restraint strap, place strap around child's midsection, and push spring tabs into buckles until both spring tabs lock in place with an audible "click". Straps can be adjusted to make strap tighter or looser as required.

Step 5.

Position Koala sign (supplied) on the outside of the restroom door. Fill the built-in dispenser with sanitary bed liners. Replacement parts and additional liners can be purchased from your local distributor.



Koala Kare Products
A Division of Bobrick

6982 S. Quentin St.
Centennial, CO 80112

© 2008 Koala Kare Products, Form No. AB00x July 2008

Distributed by
www.AmeraProducts.com
Phone: (800) 608-6568
Fax: (409) 840-5545
info@ameraproducts.com