

# INFANT SEAT KRADLE (ISKM) REPLACEMENT MESH INSTRUCTIONS

P/N 777-XX-KIT

## Items Included:


One Replacement Mesh  
Two 1/4" Aluminum Rods

## Removing the Mesh


1. Unbuckle and remove the strap by passing through the strap holders on both sides.




2. Partially close the unit so that the mesh is slack. Pull one end of the nylon away from the frame.

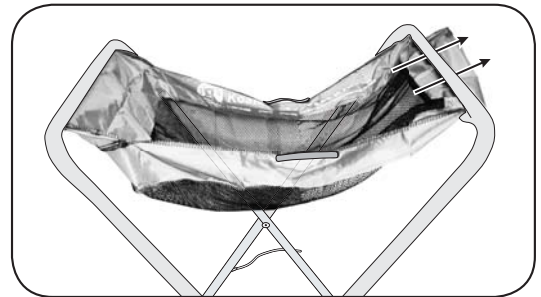

3. An aluminum rod is inside this part of the nylon. To remove, locate the unstitched opening, approximately 2.5" from the end of the material. Carefully slide the rod through this opening and remove.

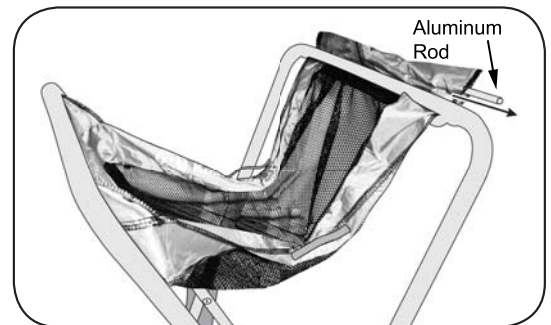

4. Pull the nylon loose through the frame and retaining bar. Remove the aluminum rod on the other side by repeating steps 2 and 3. Discard old mesh and rods.

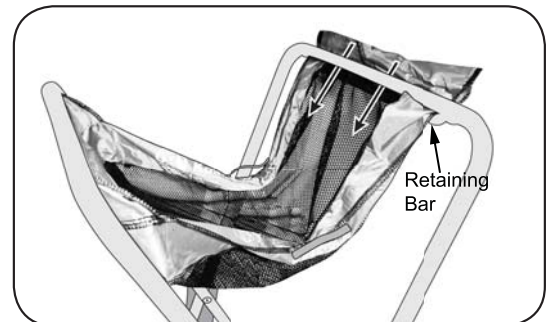


# INFANT SEAT KRADLE (ISKM) REPLACEMENT MESH INSTRUCTIONS


P/N 777-XX-KIT

## Reassembling the Mesh


1. Pictograph of the Koala logo should face inward. Feed nylon between the frame and the retaining bar.

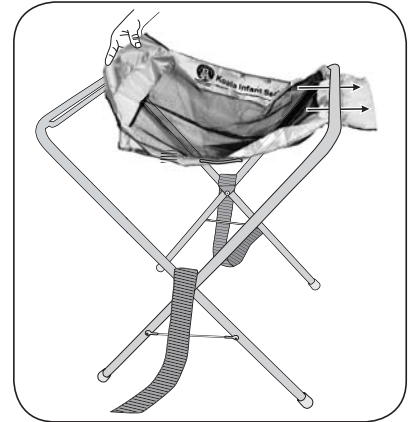

2. Locate the opening in the end of the nylon, approximately 2.5" inward. Take one of the aluminum rods supplied and slide this through the opening assuring the aluminum rod is no longer visible.

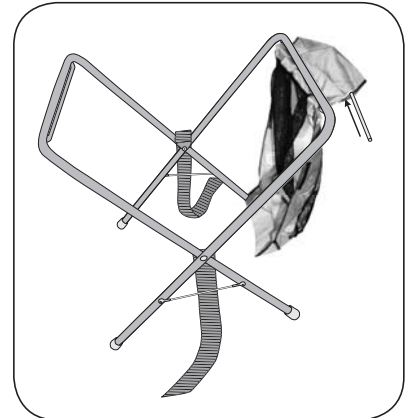

3. Pull the nylon from the inside so that the now encased rod fits snugly between the retaining bar and metal frame. Repeat steps with the remaining rod on the other side.

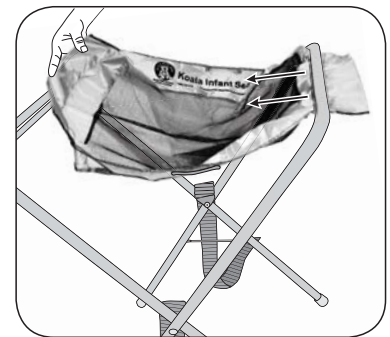

4. Check that the rods are snugly holding the mesh in place by pressing on the center of the mesh when the unit is fully open. Feed the straps back through the strap holders and snap the buckle together.

