



INSTALLATION INSTRUCTIONS: SUPPLEMENTAL ILLUSTRATION FOR FIRE RATED EXTINGUISHER CABINETS INTO MASONRY WALLS

FOR EXISTING CONSTRUCTION OR NEW CONSTRUCTION

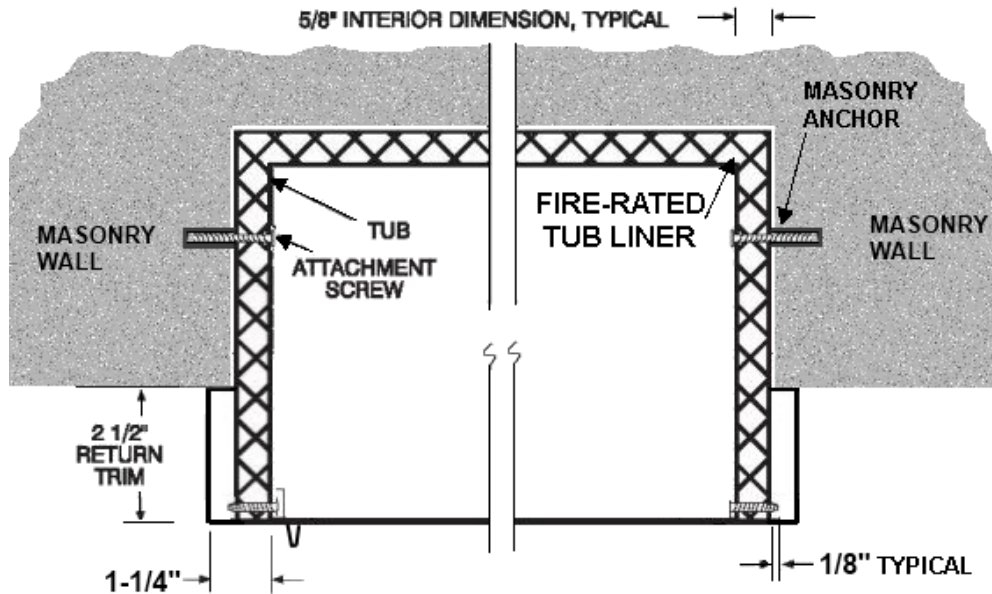

INSTALL SCREWS THROUGH BOTH TUBS INTO MASONRY ANCHORS
Fasten cabinet with a minimum of 4 screws per cabinet

SECURITY CABINETS ONLY*: MASONRY ANCHORS PROVIDED ON OUTSIDE TUB FOR NEW CONSTRUCTION ONLY

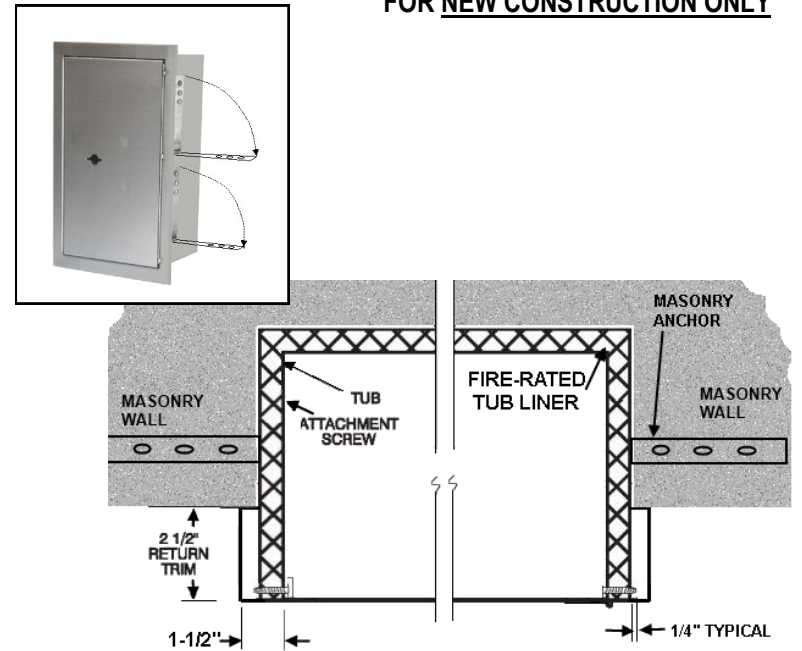

Extend masonry anchors provided, for installation in new masonry construction. Anchors are positioned 7-1/2" from each other for ease of installation into block walls.
Fire-rated tub is mechanically fastened to the inside tub—no need for additional hardware.



JL INDUSTRIES

ACTIVAR
INC.
Construction Products Group

ILLUSTRATION OF INSTALLATION INTO MASONRY WALL FOR FX-FIRE-RATED CABINETS—NTS

*NOTE: SECURITY CABINETS ARE EQUIPPED WITH MASONRY STRAPS ON OUTSIDE CABINET WHICH CAN BE USED TO MOUNT CABINET INTO NEW CONSTRUCTION.

Distributed by
www.AmeraProducts.com
Phone: (800) 608-6568
Fax: (409) 840-5545
info@ameraproducts.com