
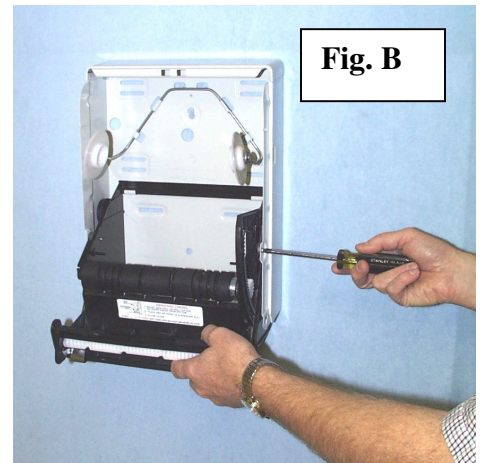


## PL-TYPE / ELECTRONIC HANDS FREE ROLL TOWEL DISPENSER MECHANISM REPLACEMENT

### PL-TYPE

1. Unlock cover and open to position shown in Fig. A.
2. Pull outward on both sides just above the pivots while rotating in both directions. Cover will release from dispenser body.
3. Remove mounting screws from each side of unit shown in Fig. B.
4. Grasp mechanism as shown in Fig. C. Slide mechanism upward to remove from mounting hooks.
5. Position new mechanism inside body against the back just above the (4) hooks. Slide downward making sure all (4) hooks are engaged.
6. Reinstall mounting screws.
7. Reinstall cover by grasping sides just above the pivots and place into position on body while depressing push bar. Rotate cover until both pivots are engaged.

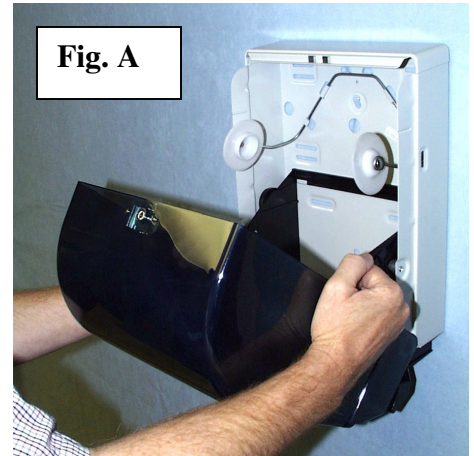

### ELECTRONIC

1. Unlock cover and remove batteries or disconnect power from unit.
2. Position cover as shown in Fig. A.
3. Pull outward on both sides just above the pivots while rotating in both directions. Cover will release from dispenser body.
4. Remove mounting screws from each side of unit shown in Fig. B.
5. Grasp mechanism as shown in Fig. C. Slide mechanism upward to remove from mounting hooks.
6. Position new mechanism inside body against the back just above the (4) hooks. Slide downward making sure all (4) hooks are engaged. All (4) hooks must be engaged for the unit to function properly. Check fit of mechanism against back making sure there is no gap along back edge of mechanism.
7. Reinstall mounting screws.
8. Reinstall cover by grasping sides just above the pivots and place into position on body. Rotate cover until both pivots are engaged.
9. Reinstall batteries or reconnect power. Allow 30 seconds for unit to calibrate.

