

UNIVERSAL CHANGING STATION, HORIZONTAL – SURFACE MOUNTED

Baby and Universal Changing Stations

MasterFormat Section 10 28 13




Scan for
Information




SUSTAINABILITY/LEED



MR 4.1 (1) MR 6 (1) EQ 4.2 (1)
MR 4.2 (1) EQ 4.1 (1) EQ 4.4 (1)

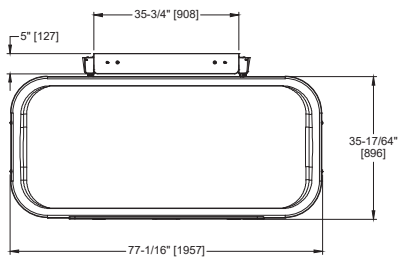


TOP VIEW OPENED FOR USE

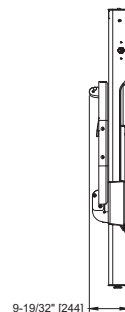


SIDE VIEW CLOSED

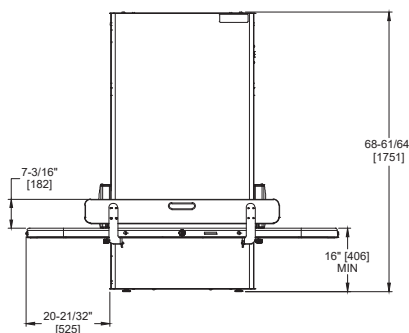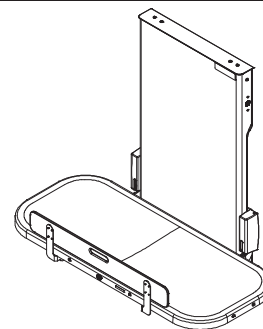

FRONT VIEW
BED LOWERED MIN

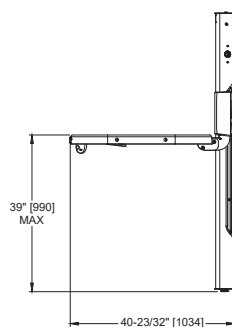

SIDE VIEW
BED RAISED MAX

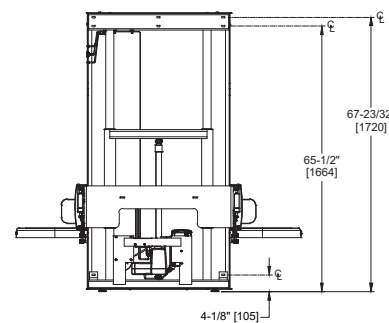

REAR VIEW
MOUNTING POINTS
ELEVATIONS AFF

NOTE:
ALL DIM'S INCH [MM]
ILLUSTRATION FOR REF ONLY AND NTS

PRODUCT OVERVIEW

Tray accommodates adults with disabilities and meets IBC requirements. Changing surface is ABS plastic for easy cleaning. Wall module cover is satin finished type 304 Stainless Steel. Structural frame is gray powder coated steel. Engineered to mount to most existing walls. Automatic retracting feature stops operation and reverses direction when obstruction is detected. Direct attached actuator ensures superior performance. Two control button locations (on tray front and side of Wall Module) for easy tray height adjustability of between 16" MIN to 39" MAX range. Complies with UL 962 certification & CSA22.2 No. 68.

KEY FEATURES & SPECIFICATIONS

- Control buttons located front and side allow for easy height adjustments, ensuring effortless transfers and comfortable positioning
- Reverses direction when an obstruction is detected.
- Engineered to mount to most existing walls with adequate structural strength to support loads intended by service equipment. Provided with convenient plug-in feature requiring a GFCI outlet / GFCI protected circuit for quick setup
- Weight capacity: 500 lbs.
- 120 VAC, 20 A, 50/60 Hz; battery backup enables operation if power fails

Distributed by
www.Ameraproducts.com
Phone: (800) 608-6568
Fax: (409) 840-5545
info@ameraproducts.com

OPERATION & MAINTENANCE

Start by pulling the tray down from its upright closed position. Lower changing table by use of the dual-controlled buttons to a comfortable height, and load the person onto the tray. To release the safety guard, hold it in place and pull out the metal plunger on the right side, then swing it around and click into place. Once the person is positioned and the guard is in place, use the dual-controlled buttons on the front of the tray or righthand side to adjust the table to your preferred height. Proceed to change as needed. When you are finished using the changing table, push the plunger to swing the safety rail back under the tray, and lower it to your desired height for comfortable unloading. Fold back into its upright position.

TECHNICAL INFORMATION / PRODUCT PROPERTIES

Property	Value
Dimensions	Closed: 77-1/16" L x 9-19/32" D x 68-61/64" H Open: 77-1/16" L x 40-23/32" D x 68-61/64" H
Construction	Stainless Steel type 304 satin finished Wall Module cover. ABS plastic thermoformed contoured changing surface. Powder coated cold rolled structural steel lifting frame.
Mounting	Surface Mounted and adjustable floor leveled
Capacity	Tested during development to sustain 500 lbs (227 kg) static load.

INSTALLATION

Installation guide and mounting diagram provided with unit. Surface mount lifting mechanism after being leveled using adjustable feet. Unit must be plugged into a 120V 20A GFCI outlet. If a duplex outlet is being used the installer needs to ensure it is part of a GFCI protected circuit. Install stainless Wall Module cover and changing surface as indicated in owner's manual. After wiring is routed and plugged, test lifting and lowering the table. Install hinged guard rail as indicated in owner's manual.

Best installation is with in-wall concealed blocking. Unit can be installed on existing stud walls as follows:

1. Locate wall studs at 16" [406] OC for fastening the station. If three (3) wall studs cannot be used, use three (3) screws into EACH available stud and drill pilot holes and install toggle fasteners securely in the wall at non-stud location. Follow dimensions and instructions on installation diagram and Owner's Manual, included with unit.
2. Attach unit to wall studs with eight (8) 1/4" x 3" long Philips pan head self-threading screws with flat washers.
3. Where wall stud is not available attach with 1/4" - 20 x 3" Toggle bolts with flat washers into toggles or expansion nuts at each available mounting hole on lifting frame.



WARRANTY

Five (5) Years from date of Invoice

Distributed by
www.Ameraproducts.com
 Phone: (800) 608-6568
 Fax: (409) 840-5545
 info@ameraproducts.com