

MODEL 220 LEVER DISPENSER USER GUIDE

Designed for all hand drying applications, this roll towel dispenser provides the user with a measured amount of untouched paper towel with each push on the lever. Smooth, easy towel delivery assures reliable dispensing. This dispenser was designed for maximum strength and durability with impact resistant materials.

DISPENSER MOUNTING

Mount the dispenser with bottom edge of the housing approximately 52 inches above the floor. Use at least four pan head screws no smaller than #8 X 1.0 inch. The installer must insure compatible and appropriate mounting hardware is used for the wall surface composition that the dispenser is being mounted upon. The dispenser (with cover) weighs 3.75 pounds.

DISPENSER COVER

The cover can be opened with the key that is taped to the back of the dispenser. Insert the key into the slot at the top of the cover. Turn the key and pull forward and the cover will open.

PAPER ROLL LOADING & STUB ROLL TRANSFER INSTRUCTIONS

This unit is designed to accept paper rolls up to an 8.25" (21 cm) diameter and a width of 7.75"- 8.25 " (19.7-21.0 cm). Paper is to be loaded with paper "tail" unwinding from the back of the roll. Load paper by placing the "tail" between the drive roller and the tension roller, then push on the lever to feed paper out of the dispenser. See Figure 1 and the instruction graphics inside the unit.

When the roll decreases to a diameter of 3-inches or less, it should be transferred from the upper roll holders to lower stub roll holders. Install a new roll of paper in the upper roll holders and place the "tail" of the new roll between the drive roller and tension roller to get started.


LEVER-STOP FEATURES

On the back of the dispenser-housing, there are two molded lever-stops which can be used to reduce the sheet length per lever stroke (Figure 2).

- Without the lever-stop, each push provides a 5 ½ inch (140 mm) sheet
- With the 5"-lever-stop (A), each push provides approximately a 5 in. (127 mm) sheet
- With the 4"-lever-stop (B), each push provides approximately a 4 in. (102 mm) sheet


It will be difficult to install the lever-stop once the dispenser has been mounted to the wall, therefore, the installation should take place beforehand.

To install the lever-stop, first remove them from the back of the dispenser, then install into the designated slot as shown in Figure 2.

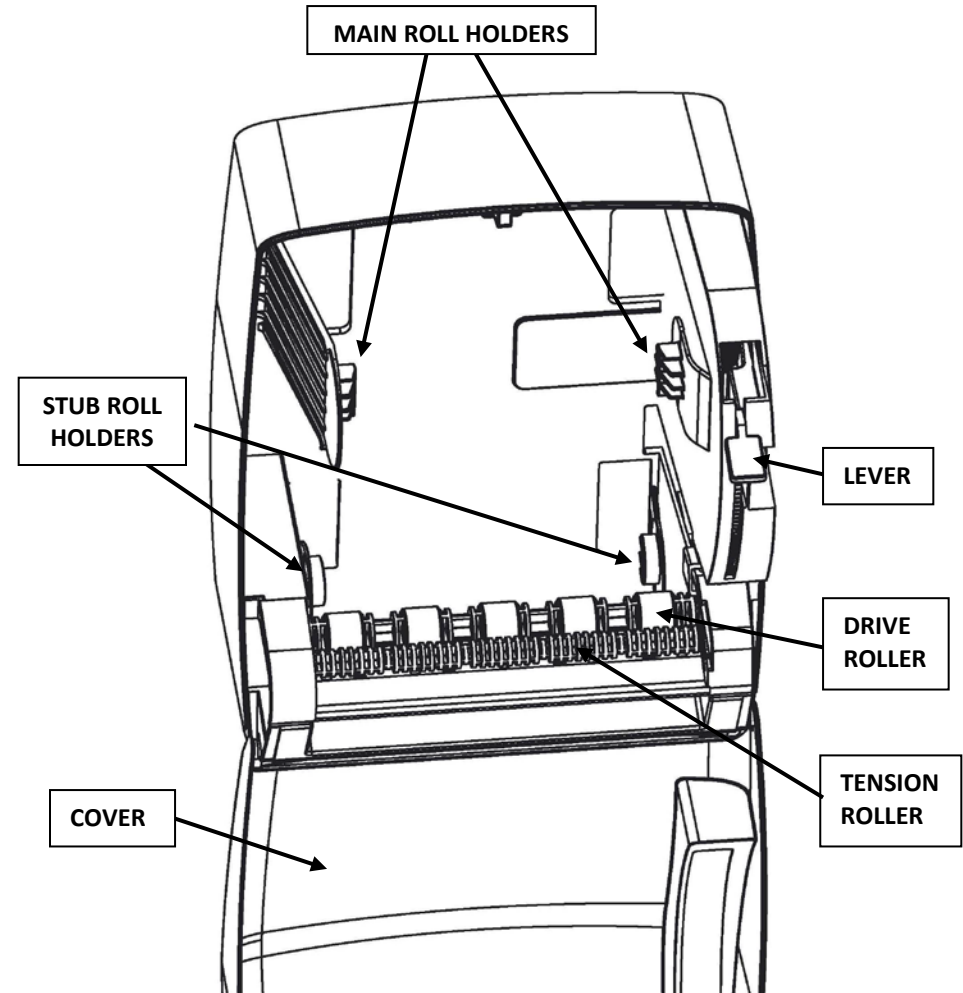

[FIGURE 1 – GENERAL VIEW]



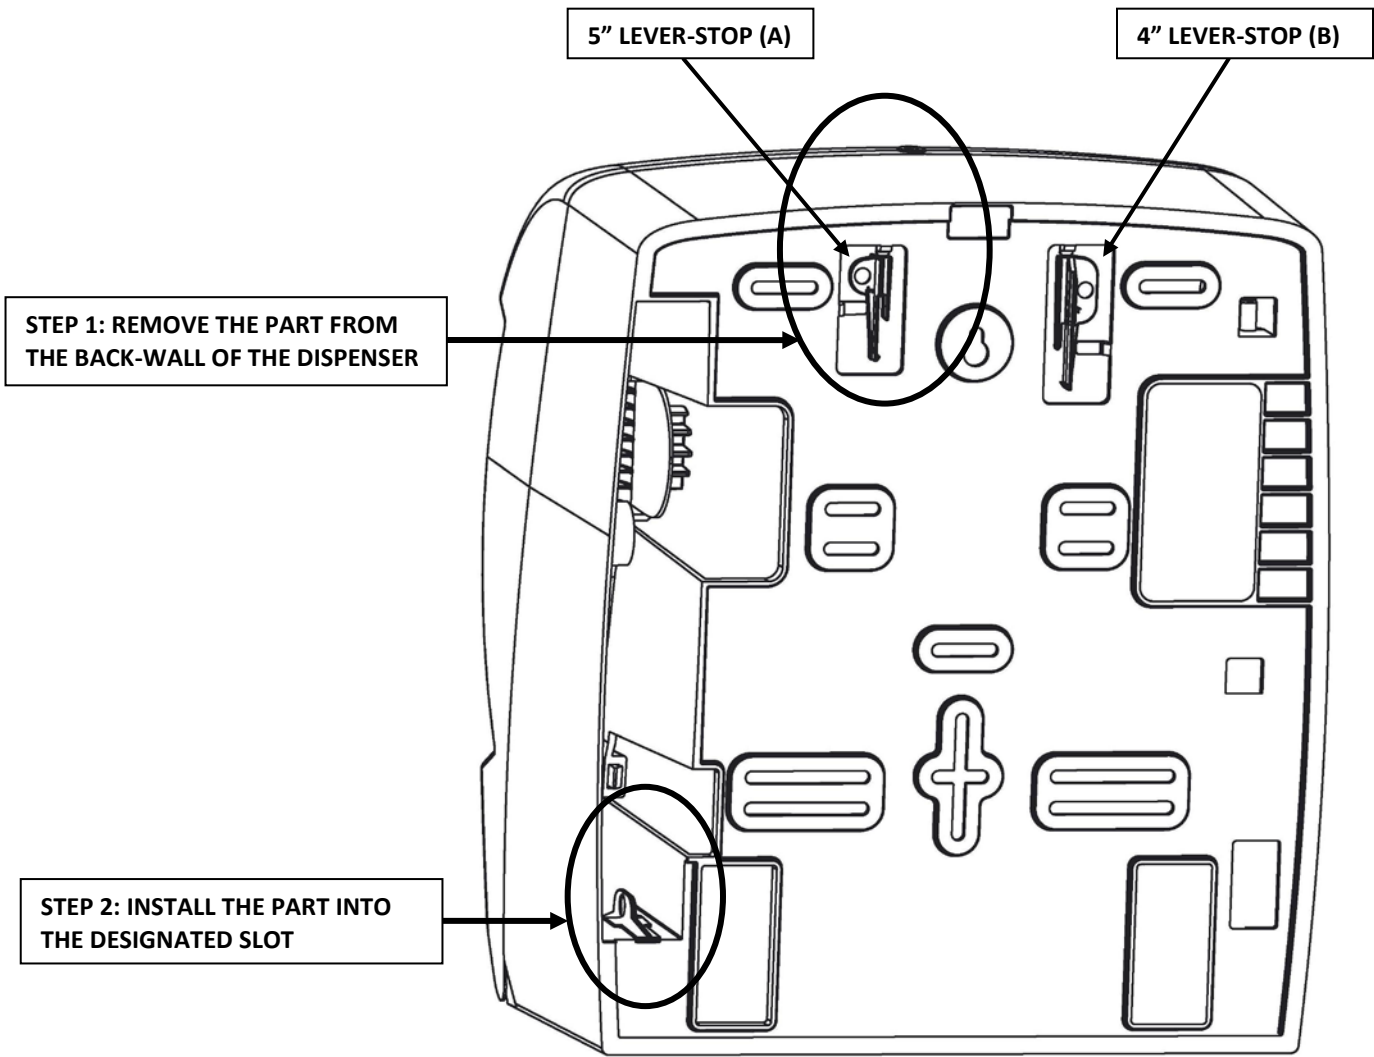

[FIGURE 2 – THE BACK OF DISPENSER]

Distributed by
www.AmeraProducts.com
 Phone: (800) 608-6568
 Fax: (409) 840-5545
info@ameraproducts.com