

## INSTALLATION AND OPERATION INSTRUCTIONS

### GAMCO WALL-MOUNTED BCS-1 AND BCS-2

MATERIALS SUPPLIED:	TOOLS WHICH MAY BE NEEDED FOR INSTALLATION:
(4) 1/4" x 3" Panhead wood screws (4) 1/4" Flat washers	Measuring Tape Gloves Level Stud finder Pencil
	Drill Phillips screwdriver 7/32" Drill Bit. (masonry) 1/8" Drill Bit. (regular) 1/2" Drill Bit. (reg & masonry)



Your unit can be installed to meet ADA regulations when and where applicable. Refer to Federal Register, Volume 56, No 144 28 CFR Part 36.

You are responsible for the safe operation of this unit.

Distributed by  
**www.Ameraproducts.com**  
Phone: (800) 608-6568  
Fax: (409) 840-5545  
info@ameraproducts.com

**GAMCO**  
Commercial Restroom Accessories  
A Division of Bobrick

## OPERATING INSTRUCTIONS

### Please Note:

To assure proper installation, it is suggested that a qualified person or carpenter install the Gamco Baby Changing Station. Gamco Commercial Restroom Accessories will not be responsible if the station is not installed properly.

Gamco Baby Changing Stations have been tested to hold a substantial static load. The unit must be attached to a permanent wall that is capable of holding a substantial load. The maximum recommended total weight for this baby changing station (including baby and parcel bag) is 60 lbs. Excessive weight may cause a hazardous or unstable condition to exist.

### Using Restraint System

To fasten the waist restraint strap, place strap around child's midsection, and push spring tabs into buckle until both spring tabs lock in place with an audible "click". Straps can be adjusted to make strap tighter or looser as required.

### Inspection Criteria:

A properly maintained baby changing station:

- Opens and closes smoothly
- Has both ends of a functioning, non-frayed strap: buckle clicks when closed and strap is attached to unit at both ends.
- Provides a clean, convenient place for customers to attend to their children.

### ASTM F 2285-04

**WARNING:** Never leave child unattended.

**WARNING:** Avoid serious injury from falling or sliding out. Always use restraint system.

**WARNING:** Designed for Infants Only. Age up to 3.5 years and weighing less than 50 lbs. Keep one hand on the child at all times.

Parcels or accessory items, or both, placed on the unit may cause the unit to become unstable.



### EN 12221:2008

**WARNING:** Do not leave the child unattended.


All assembly fittings shall always be correctly tightened and checked regularly.  
Be aware of the risk of open fire and other sources of strong heat, such as electric bar fires, gas fires, etc. in the near vicinity of the changing unit.  
The changing unit is intended up to a maximum weight of 15 kg. Do not use changing unit if any parts are broken or missing. A changing pad is not required for this product.  
Additional or replacement parts shall only be obtained from the manufacturer or distributor.  
Unit should be cleaned once or more daily with a clean nylon brush and spray disinfectant.

Distributed by  
**www.Ameraproducts.com**  
Phone: (800) 608-6568  
Fax: (409) 840-5545  
info@ameraproducts.com

**GAMCO**  
Commercial Restroom Accessories  
A Division of Bobrick

# INSTALLATION INSTRUCTIONS

## HORIZONTAL BABY CHANGING STATION GAMCO WALL-MOUNTED BCS-1 AND BCS-2

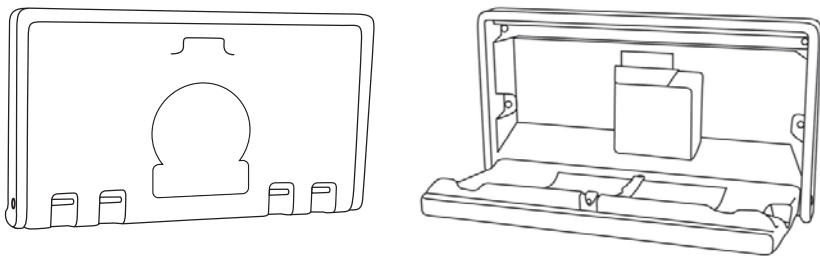

### Step 1.

Remove changing station from the shipping container and check for any freight damage. Identify the best location for installing the unit. Hold the unit in place and open the bed. Make sure you have taken the operating clearance into consideration.

### Step 2.

Based upon the type of wall on which you will be mounting the station, determine the best method of mounting. You may have left over hardware when you are finished with installation.

### Step 3.

The horizontal unit has four mounting holes provided in the back wall of the unit. The four holes are positioned on a 32" (813mm) stud center.

If possible, locate the wood or metal studs for fastening the changing station in the desired location. If the walls do not have studs on center as outlined, make sure at least one side of the unit is installed into the stud. Use toggles (may have to purchase) for holes on the other side.


### Step 4.

Find the stud where you will be attaching the left side of the changing station to the wall. Measure up from the floor 44" (1118mm), at the center of the stud and mark the wall. Mark holes using a level and measuring tape to make sure holes are precisely positioned. Hold unit in place to check. Use a 1/8" drill bit to make pilot holes and the four 1/4" x 3" panhead screws with washers (supplied) to attach the unit to the wall studs. This will place the bottom of the station 26-1/2" (673mm) from the floor and the top of the bed at 33" (838mm) from the floor.

If the wall surface is masonry or tile over wood studs, use a 7/32" masonry drill bit for the pilot hole until you hit the stud. Change bit to 1/8" regular drill bit. Use the four 1/4" x 3" panhead wood screws with washers (supplied).

If the wall has wood studs that are not on 32" (813mm) centers, has metal studs or an underlying surface of concrete block, drill with a 1/2" (12mm) masonry bit. (You may have to purchase toggles before installing.) You must allow a minimum of inside wall space for toggles to turn depending on toggles used. Insert and tighten toggles.

Bobrick Customer Service New York Division  
Phone: (518) 877-7444 • Fax: 518-877-5029  
Bobrick Customer Service Los Angeles Division  
Phone: (818) 982-9600 • Fax: 818-503-9287  
or email [BobrickCustomerService@bobrick.com](mailto:BobrickCustomerService@bobrick.com)

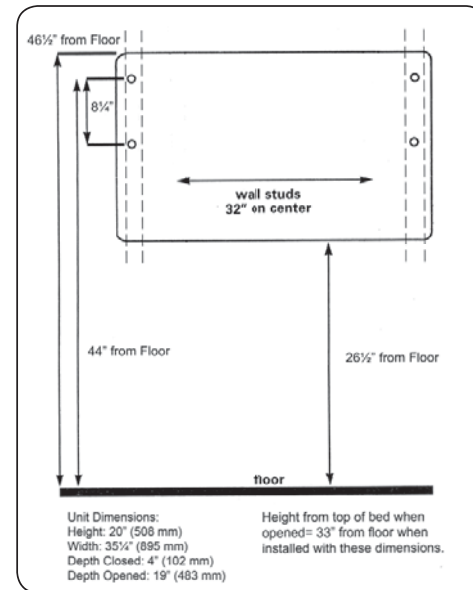

Gamco Commercial Restroom Accessories: A Division of Bobrick, One Gamco Place, Durant, OK 74701-1910  
For Customer Service Bobrick New York Division Phone: (518) 877-7444 • Fax: 518-877-5029  
For Customer Service Bobrick Los Angeles Division Phone: (818) 982-9600 • Fax: 818-503-9287