



Child Protection Seat KB102 INSTALLATION INSTRUCTIONS

Please Note:

To assure proper installation, it is suggested that a qualified person or carpenter install the Koala Child Protection Seat.

Koala Kare Products is not responsible if the seat is installed improperly.

Tools Needed:

- Measuring Tape
- Level
- Flat Head and Phillips Screwdrivers
- Pencil
- Drill
- 3/8" (.96 cm) Drill Bit

Hardware Supplied:

- Four 1/4" (.64 cm) insert bolts and washers
- Four threaded barrel inserts
- One restroom sign

Distributed by
www.Ameraproducts.com
Phone: (800) 608-6568
Fax: (409) 840-5545
info@ameraproducts.com

You are responsible for the safe operation of this unit.

Inspection Criteria:


A properly maintained unit:

- Opens and closes smoothly.
- Has two end caps located on lower sides of unit.
- Has a fastening nut located at end of rod.
- Has both ends of a functioning, non-frayed strap: buckle clicks when closed and strap is attached at both ends of the unit.
- Child Protection Seat (CPS) Strap (725)
- CPS Label (791)
- CPS Pictogram Back Label (794)
- Koala Restroom Door Decal (841)
- Cream Unit End Caps (689)
- Grey Unit End Caps (387)

**Your unit can be installed to meet ADA regulations when and where applicable.
Refer to Federal Register, Volume 56, No. 144 28 CFR Part 36.**



Child Protection Seat KB102 INSTALLATION INSTRUCTIONS

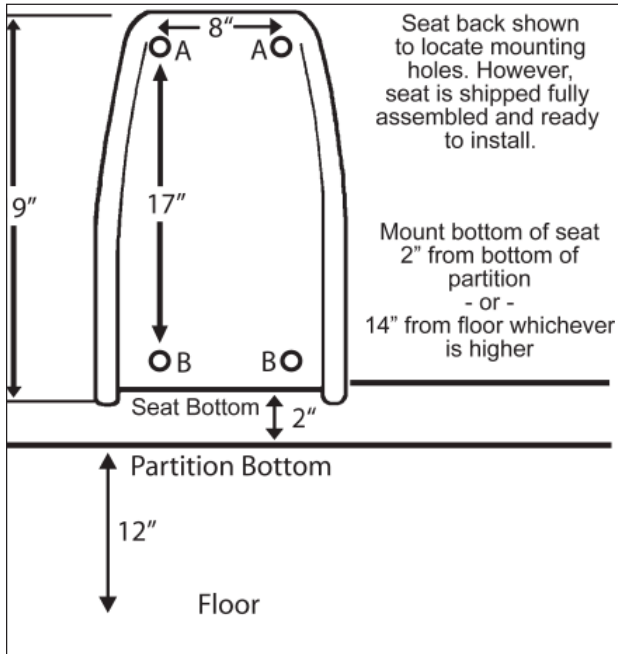

Step 1.

The Child Protection Seat (CPS) is designed to be mounted on a bathroom or fitting room partition. The unit can also be mounted on a side wall (hardware not included). Establish proper CPS placement, taking door swing and clearance into consideration.

Step 2.

Place the bottom of the unit 2" (5 cm) above the bottom of the partition or 14" (35.6 cm) above the floor, whichever is higher. Use the CPS as a template for locating and marking the mounting holes.

Step 3.

After establishing the proper placement of the four mounting holes, drill through the partition using a 3/8" (.96 cm) drill bit.

Step 4.


Insert the four threaded barrel inserts (supplied) from the outside of the partition. Mount the unit using the four 1/4" (.64 cm) insert bolts and washers.

Step 5.

Position Koala sign (supplied) on the outside of the restroom door. Replacement parts can be purchased from your local distributor.

Using Restraint System

To fasten the waist restraint strap, place strap around child's midsection and push spring tabs into buckles until both spring tabs lock in place with an audible "click". Straps can be adjusted to make strap tighter or looser as required.

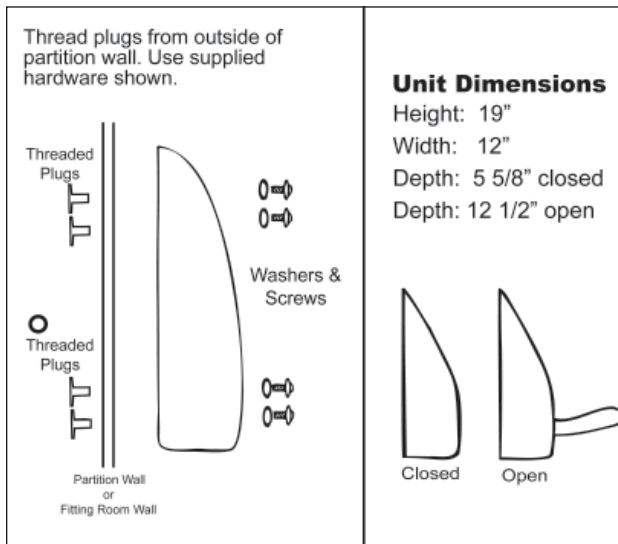

Distributed by
www.Ameraproducts.com

Phone: (800) 608-6568

Fax: (409) 840-5545

info@ameraproducts.com



Koala Kare Products
A Division of Bobrick

6982 S. Quentin St.
Centennial, CO 80112

© 2008 Koala Kare Products, Form No. AB00x July 2008