



# Vertical Recessed Mounted Baby Changing Station KB111-SSRE INSTALLATION INSTRUCTIONS

## Please Note:

To assure proper installation, it is suggested that a qualified person or carpenter install the Koala Baby Changing Station. Koala Kare Products will not be responsible if the station is not installed properly.

Koala Baby Changing Stations have been tested to hold a substantial static load. The unit must be attached to a permanent wall that is capable of holding a substantial load.

## Tools Needed:

- Measuring Tape
- Level
- Flat Head and Phillips Screwdrivers
- Stud Finder
- Pencil
- Drill
- 7/32" (.56 cm) Drill Bit (regular and masonry)
- 1/8" (.32 cm) Drill Bit (regular and masonry)
- 1/2" (1.27 cm) Drill Bit (regular and masonry)

## Hardware Supplied:

- Four 1/4" x 3" (.64 cm x 7.62 cm) Panhead Wood Screws
- Four 1/4" x 3" (.64 cm x 7.62 cm) Phillips Panhead Machine Screws
- Four 3/4" x 1/4" (2 cm x .64 cm) Hole Washers
- Four Toggles
- One Restroom Sign

**You are responsible for the safe operation of this unit.**

## Inspection Criteria:

A properly maintained unit:

- Opens and closes smoothly.
- Has both ends of a functioning, non-frayed strap: buckle clicks when closed and strap is attached at both ends of the unit.
- Offers parents liners through a fully stocked liner dispenser. (Dispenser is built into unit.)
- Provides a clean, convenient place for customers to attend to their children.

**To order replacement parts call 888.733.3456, 303.539.8300, or visit [www.koalabear.com](http://www.koalabear.com).**


- Vertical Strap (885)
- Vertical KB111-SSRE Gas Shock (877)
- Grey Vertical Liner Dispenser Lid (827)
- Koala Restroom Door Decal (841)
- Warning Label (975)
- Grey Unit End Caps (850)
- Box of Liners (KB150-99)

**Your unit can be installed to meet ADA regulations when and where applicable. Refer to Federal Register, Volume 56, No. 144 28 CFR Part 36.**

Distributed by  
[www.Ameraproducts.com](http://www.Ameraproducts.com)  
Phone: (800) 608-6568  
Fax: (409) 840-5545  
[info@ameraproducts.com](mailto:info@ameraproducts.com)



# Vertical Recessed Mounted Baby Changing Station KB111-SSRE INSTALLATION INSTRUCTIONS

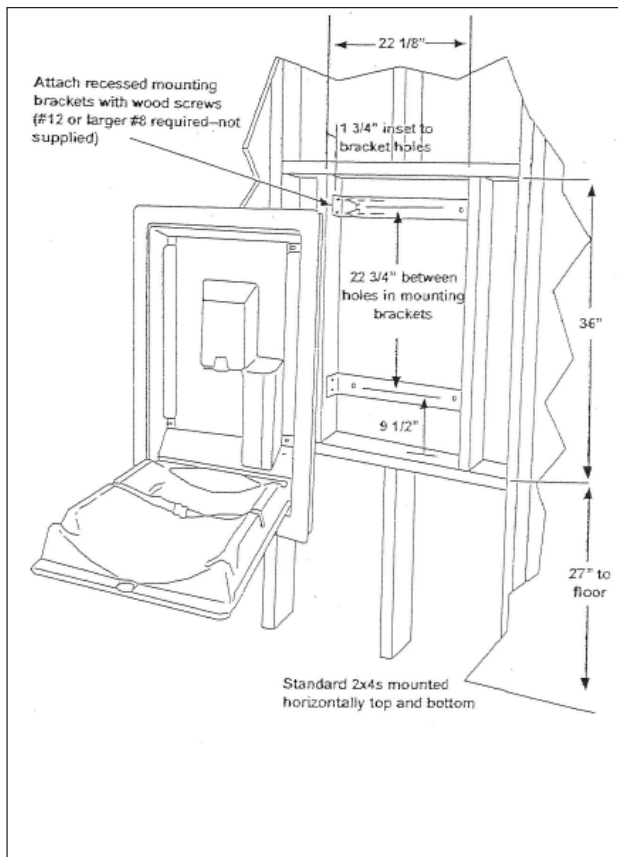

## Step 1.

Remove changing station from the shipping container and check for any freight damage. Identify the best location for installing the unit. Hold the unit in place and open the bed. Make sure you have taken the operating clearance into consideration.

## Step 2.

Select the wall area where the unit will be installed. Measure from the floor \_\_\_\_" (\_\_\_\_ cm) on stud center and mark the wall. Hold the unit in place to verify the alignment. Mark rough opening \_\_\_\_" W x \_\_\_\_" H (\_\_\_\_ cm x \_\_\_\_ cm) and cut a hole in the wall. Construct mounting frame as indicated in the illustration. If the wall surface is masonry or tile over wood studs, use caution when cutting rough opening.

## Step 3.

The unit will be mounted using four 1/4" x 1/2" (.64 cm x 3.84 cm) wood screws through side holes as shown in illustration.


## Step 4.

Place the unit into the recessed area and insert the screws and flat washers to hold the unit in place. It may be necessary to adjust the level of unit by using a shim on the top right or left side of the unit before tightening securely to the studs.


## Step 5.

Position Koala sign (supplied) on the outside of the restroom door. Fill the built-in dispenser with sanitary bed liners. Replacement parts and additional liners can be purchased from your local distributor or by calling toll free 888.733.3456 or 303.539.8300 in the U.S.


## Using Toggles




A. Insert Toggle in hole.



B. Pull ring and push cap tightly against wall.



C. Snap off straps.



D. Install unit using screws and washers.

## Using Restraint System

To fasten the waist restraint strap, place strap around child's midsection, and push spring tabs into buckles until both spring tabs lock in place with an audible "click". Straps can be adjusted to make strap tighter or looser as required.

Distributed by  
**www.Ameraproducts.com**

Phone: (800) 608-6568

Fax: (409) 840-5545

info@ameraproducts.com



Koala Kare Products  
A Division of Bobrick

6982 S. Quentin St.  
Centennial, CO 80112